Thank you for purchasing a Sony Ericsson W715 Walkman™. Stay in touch and enjoy your favorite music in new and innovative ways.

For additional phone content, go to *www.sonyericsson.com/fun*. Register now to get a suite of tools, free online storage, special offers, news and competitions at *www.sonyericsson.com/myphone*.

For product support, go to *www.sonyericsson.com/support*.

Accessories – More for your phone

Wireless Home Audio System MBS-900

Let your music take shape

Stereo Bluetooth™ Headset HBH-DS205

Enjoy wireless music without missing a call

Noise Cancelling Headphones HPM-88

Bring the music, leave the noise

These accessories can be purchased separately but may not be available in every market. To view full feature descriptions and the range of accessories go to *www.sonyericsson.com/accessories*.

Contents

Getting started.....6

Assembly.....6
Turning on the phone.....7
Help.....8
Charging the battery.....8
Phone overview.....11
Menu overview.....13
Navigation.....15
Memory.....16
Phone language.....17
Entering text.....17
Entering text - Zi text input.....18
Chinese input.....19

Walkman™ 24

Stereo portable handsfree.....24
Walkman™ player.....25
PlayNow™.....28
TrackID™.....28
Online music and video clips.....28
Video player.....29
Radio.....29
MusicDJ™.....30
Record sound.....30

Transferring and handling content.....31

Handling content in the phone.....31
Sending content to another phone.....31
Transferring content to and from a computer.....32
Using the USB cable.....32
Phone name.....33
Using Bluetooth™ wireless technology.....33
Backing up and restoring.....35

Calling.....37

Making and receiving calls.....37
Contacts.....39
Speed dial.....42
More calling features.....42

Messaging.....46

Text and picture messages.....46
Voice messages.....48
Email.....48

This is an Internet version of this publication. © Print only for private use.

Imaging 50
Using the camera.....50
More camera features.....51
Viewing and tagging photos.....51
Using photos.....52
Working with photos.....53
Printing photos.....53

Internet.....54
Bookmarks.....54
History pages.....55
More browser features.....55
Internet security and certificates.....56
Web feeds.....56

GPS.....58
Using GPS.....58
More GPS features.....58

Synchronising.....60
Synchronising using a computer.....60
Synchronising using an Internet service.....61

More features.....62
Flight mode.....62
Update Service.....62
Alarms.....63
Calendar.....64
Notes.....64
Tasks.....65
Profiles.....65
Time and date.....65
Theme.....66
Main menu layout.....66
Ringtones.....66
Screen orientation.....66
Games.....67
Applications.....67
Locks.....68

Troubleshooting.....70
Common questions.....70
Error messages.....74

Important information.....75

Index.....83

This is an Internet version of this publication. © Print only for private use.

Sony Ericsson W715 Walkman™

UMTS/HSPA band 1/8 GSM/GPRS/EDGE 850/900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2008

Publication number: 1221-2454.2

Please note:
Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112*.

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Important information* before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

WALKMAN is a trademark or a registered trademark of Sony Corporation.

PLAYSTATION is a trademark or registered trademark of Sony Computer Entertainment, Inc.

Sony, Memory Stick Micro™ and M2™ are trademarks or registered trademarks of Sony Corporation.

SyncML is a trademark or registered trademark of Open Mobile Alliance LTD.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries/regions.

Microsoft, ActiveSync, Windows, Outlook, Windows Media and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries/regions.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B;

This is an Internet version of this publication. © Print only for private use.

Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Java, JavaScript and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries/regions.

End-user license agreement for Sun Java Platform, Micro Edition.

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2. Export Regulations: Software including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries/ regions. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. 3. Restricted rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) and FAR 52.227-19(c) (2) as applicable.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS

This is an Internet version of this publication. © Print only for private use.

252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

Note: Sony Ericsson advises users to backup their personal data information.

All illustrations are for illustration only and may not accurately depict the actual phone.

SMS Registration:

In order to provide faster and better quality after-sale services, an SMS will be sent automatically by the phone (The SMS expense is upon the mobile fee bill from the operator) to the server of Sony Ericsson Mobile Communications (China) Co., Ltd. once the phone is in use. The relevant information of the SMS will be stored and used for after-sales service management by Sony Ericsson.

To use some pre-loaded applications (e.g. TrackID, MSN) you need first activate data service. Using data services (GPRS or 3G services) may incur data traffic fee. Please contact your network operator for expense details.

Instruction symbols

These symbols may appear in the User guide.

! Note

Tip

Warning

A service or function is network- or subscription-dependent. Contact your network operator for details.

> Use a selection or navigation key to scroll and select. See *Navigation* on page 15.

This is an Internet version of this publication. © Print only for private use.

Getting started

Assembly

Before you start using your phone, you need to insert a SIM card and the battery.

To insert the SIM card

1 Unlock the battery cover lock.
2 Remove the battery cover.
3 Slide the SIM card into its holder with the gold-coloured contacts facing down.

To insert the battery

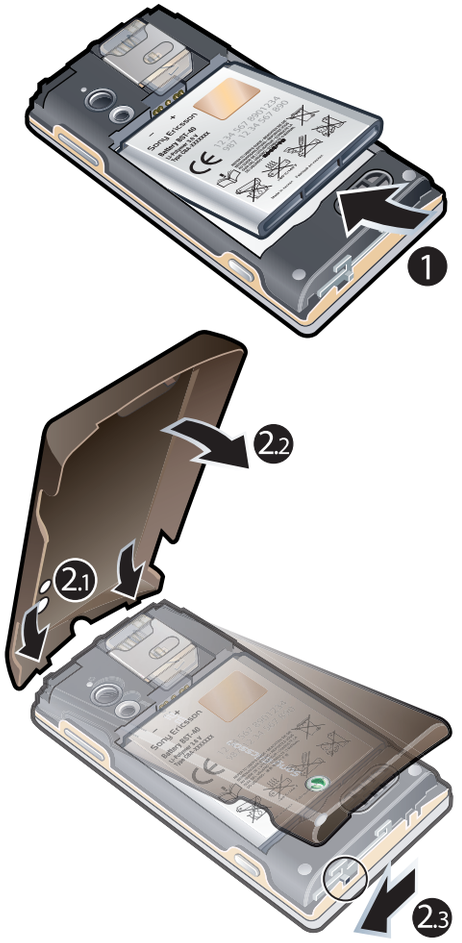

1 Insert the battery with the label side up and the connectors facing each other.
2 Attach the battery cover and lock it.

This is an Internet version of this publication. © Print only for private use.

Turning on the phone

To turn on the phone

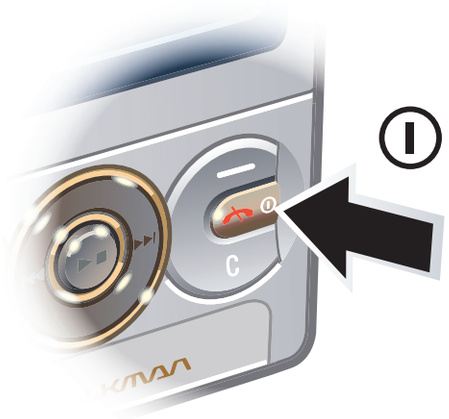

1 Press and hold down ⏻.
2 Enter your SIM card PIN, if requested, and select OK.
3 Select a language.
4 Select Yes to use the setup wizard.

If you want to correct a mistake when you enter your PIN, press C.

SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

You can save contacts on the SIM card before you remove it from your phone.

See To copy names and numbers to the SIM card on page 40.

PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

If you enter the wrong PIN three times in a row, the SIM card is blocked. See SIM card lock on page 68.

Standby

After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready for use.

Using other networks

Making and receiving calls, using messaging, and data transfer, for example, Internet-based services, outside your home network (roaming), may incur additional costs. Contact your operator for more information.

This is an Internet version of this publication. © Print only for private use.

Help

In addition to this User guide, Feature guides and more information are available at *www.sonyericsson.com/cn*.

Help and information are also available in your phone.

To view tips and tricks

1 From standby select Menu > Settings > the General tab > Setup wizard.
2 Select Tips and tricks.

To view information about functions

- Scroll to a function and select Info, if available. In some cases, Info appears under Options.

To view the phone demonstration

- From standby select Menu > Entertainment > Demo tour.

To view the phone status

- From standby press the volume key. Phone, memory and battery information is shown.

Charging the battery

The phone battery is partly charged when you buy it.

! *It may take 30 minutes for the battery icon to appear on the screen.*

Using the USB charger

To connect the charger and charge the battery

(The illustrations are for guidance only and may not accurately depict the actual phone)

1 Connect the USB cable (you can get instructions for three conditions from the Note) plug to the AC adapter USB socket, as shown in the illustration. The USB cable is supplied with your phone.

2 Connect the USB cable connector to your phone. Press a key to view the charging status on the screen. It takes approximately 3 hours to fully charge the battery.

This is an Internet version of this publication. © Print only for private use.

To remove the charger

1 Charge your battery until the battery icon indicates a full charge.
2 Tilt the USB charger connector upwards to remove it.

Note

- If there are two USB cables in the kit (a USB cable for charging and a USB cable for data transfer), the USB cable for charging **is only intended for charging your phone. Do not use it for transferring data.** The USB cable for the USB charger is only intended for connection to the AC adapter to charge your phone. **It must not be used for connection to a PC. It can only be used for charging your phone. Never use it for charging accessories.**

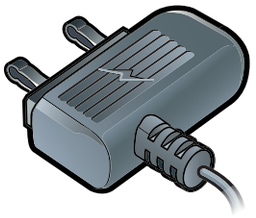

USB cable for charging

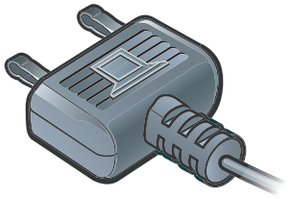

USB cable for transferring

- If there is only one USB cable in the kit, it is intended for charging your phone as well as transferring data.
- If there is only one USB cable for the USB charger in the phone kit, this USB cable is only intended for charging your phone.
- To charge your phone, Sony Ericsson strongly recommends that you **use only Sony Ericsson branded original batteries, a power supply which is in accordance with specification YD/T 1591-2006 (a Communications Industry standard of P. R. China), and the USB cable supplied with your phone.** The use of third-party products may decrease the performance of your

This is an Internet version of this publication. © Print only for private use.

phone and/or pose a risk to your health or safety.

You can charge the battery for more or less than 3 hours. Interrupted charging will not damage the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. The stand-by time for this battery is up to 380 hours.

Use only Sony Ericsson branded original batteries intended for use with your mobile phone. If you use other batteries you may not be able to charge your phone.

This is an Internet version of this publication. © Print only for private use.

Phone overview

1 Ear speaker

2 Screen light sensor

3 Screen

4 Connector for charger, handsfree and USB cable

5 Selection keys

6 Navigation key

7 Call key

8 Activity menu key

9 Memory card slot (under the cover)

10 Video call camera

11 End key, On/off key

12 C key (Clear)

13 Silent key

This is an Internet version of this publication. © Print only for private use.

14 Walkman™ key

15 Main camera

16 Volume, digital zoom keys

17 Flash

18 Camera key

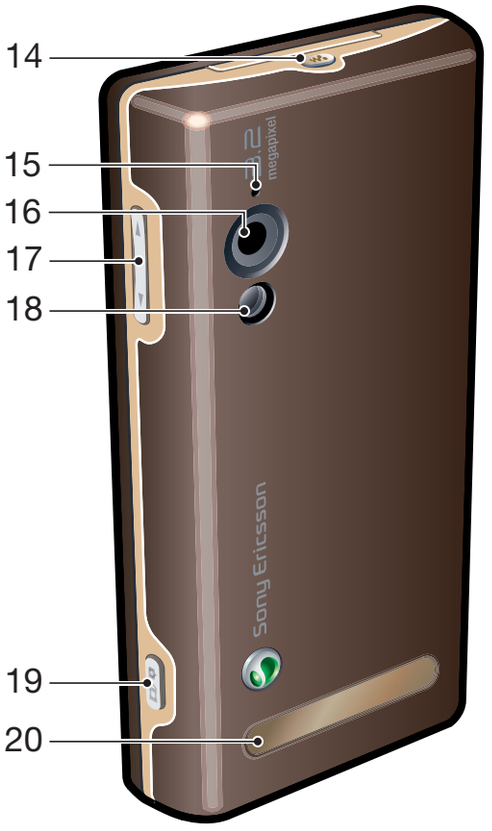

This is an Internet version of this publication. © Print only for private use.

Menu overview

PlayNow™*

Camera

Location services
Tracker
Google Maps*
Navigation*
My favourites
Status info
Log
Settings

Calls**
All
Answered
Dialled
Missed

Internet

Messaging
Write new
Inbox
Messages
Email
IM*
Call voicemail

Contacts
Myself
New contact

Organiser
File manager **
Alarms
Applications
Calendar
Tasks
Notes
Synchronisation
Timer
Stopwatch
Light
Calculator
Code memo

Entertainment
Online services*
TrackID™
Location services
Games
VideoDJ™
PhotoDJ™
MusicDJ™
Remote control
Record sound
Demo tour

Media
Photo
Music
Video
Games
Web feeds
Settings

WALKMAN

Settings**
General
Profiles
Time & date
Language
Update service
Voice control
New events
Shortcuts
Flight mode
Security
Setup wizard
Accessibility*
Phone status
Master reset
Sounds & alerts
Ring volume
Ringtone
Silent mode
Increasing ring
Vibrating alert

This is an Internet version of this publication. © Print only for private use.

Message alert
Key sound

Display
Wallpaper
Main menu layout
Theme
Startup screen
Screen saver
Clock size
Brightness
Edit line names*

Calls
Speed dial
Smart search
Divert calls
Switch to line 2*
Manage calls
Time & cost*
Show/hide my no.
Handsfree
Open to answer
Close to end call

Connectivity
Wi-Fi
Bluetooth
USB
Phone name
Network sharing
Synchronisation
Device management
Mobile networks
Data communication*
Internet settings
Streaming settings
Message settings*
SIP settings
Accessories

* Some menus are operator-, network- and subscription-dependent.
** You can use the navigation key to scroll between tabs in submenus. For more information, see *Navigation* on page 15.

This is an Internet version of this publication. © Print only for private use.

Navigation

To navigate the phone menus

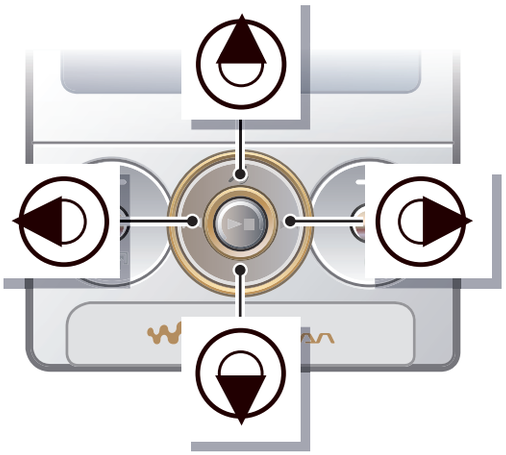

1 From standby select Menu.
2 Use the navigation key to move through the menus.

To select actions on the screen

- Press the left, centre or right selection key.

To view options for an item

- Select Options to, for example, edit.

To end a function

- Press .

To return to standby

- Press .

To navigate your media

1 From standby select Menu > Media.
2 Scroll to a menu item and press the navigation key right.
3 To go back, press the navigation key left.

To delete items

- Press C to delete items such as numbers, letters, pictures and sounds.

Tabs

Tabs may be available. For example, Settings have tabs.

To scroll between tabs

- Press the navigation key left or right.

Shortcuts

You can use keypad shortcuts to go directly to functions.

To use navigation key shortcuts

- From standby press , , or to go directly to a function.

To edit a navigation key shortcut

1 From standby select Menu > Settings > the General tab > Shortcuts.
2 Scroll to an option and select Edit.

This is an Internet version of this publication. © Print only for private use.

3 Scroll to a menu option and select Shortc..

Main menu shortcuts

Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu item

- Select Menu and press 1 – 9, *a/A, 0 + or #⌴.

! *The Main menu layout must be set to Grid. See To change the main menu layout on page 66.*

Activity menu

The activity menu gives you quick access to:

- New events – missed calls and new messages.
- Running apps – applications that are running in the background.
- My shortcuts – add your favourite functions to access them quickly.
- Internet – quick access to the Internet.

To open the activity menu

- Press ⌂.

Memory

You can save content on the memory card, in the phone memory and on the SIM card. Photos and music are saved on the memory card, if a memory card is inserted. If not, or if the memory card is full, photos and music are saved in the phone memory. Messages and contacts are saved in the phone memory, but you can choose to save them on the SIM card.

Memory card

! *You may have to purchase a memory card separately.*

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can move content between the memory card and the phone memory. See *Handling content in the phone* on page 31.

This is an Internet version of this publication. © Print only for private use.

To insert a memory card

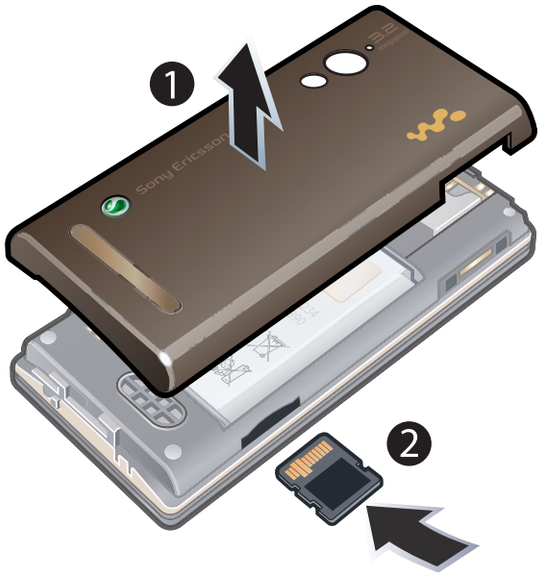

- Remove the battery cover and insert the memory card with the gold-coloured contacts facing up.

To remove a memory card

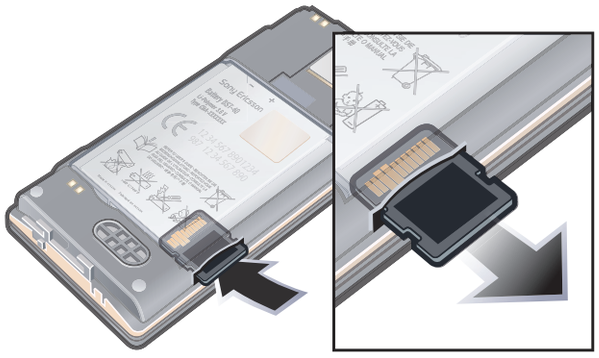

- Remove the battery cover and press the edge of the memory card to release and remove it.

Phone language

You can select a language to use in your phone.

To change the phone language

1. From standby select Menu > Settings > the General tab > Language > Phone language.
2. Select an option.

Entering text

You can use multitap text input or T9™ Text Input to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

- When you enter text, press and hold down *a/A.

To shift between capitals and lower-case letters

- When you enter text, press *a/A.

To enter numbers

- When you enter text, press and hold down 0 + – 9.

To enter full stops and commas

- When you enter text, press 1.

This is an Internet version of this publication. © Print only for private use.

To enter a symbol

1 When you enter text, select Options > Add symbol.
2 Scroll to a symbol and select Insert.

To enter text using T9™ Text Input

1 From standby select, for example, Menu > Messaging > Write new > Message.
2 If T9 is not displayed, press and hold down *a/A to change to T9 Text Input.
3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press 5, 2, 6, 3. Write the whole word before looking at the suggestions.
4 Use ▲ or ▼ to view suggestions.
5 Press #␣ to accept a suggestion.

To enter text using multitap

1 From standby select, for example, Menu > Messaging > Write new > Message.
2 If T9 is displayed, press and hold down *a/A to change to multitap text input.
3 Press 2 – 9 repeatedly until the desired letter appears.
4 When a word is written, press #␣ to add a space.

! *Multitap input only applies when latin characters are selected as input language.*

To add words to the built-in dictionary

1 When you enter text using T9 Text Input, select Options > Spell word.
2 Write the word using multitap input and select Insert.

Entering text - Zi text input

You can use multitap text input or Zi™ text input to enter text. The Zi text input method uses a built-in dictionary.

By using the Zi text input you only have to press each key once. Continue writing a word even if it appears to be wrong.

To enter text using Zi text input

1 For example, to write the word “Jane”, Press 5, 2, 6, 3.
2 You now have several options:
- If the word shown is the one you want, press #␣ to accept and add a space. To accept a word without adding a space, press ►.
- If the word shown is not the one you want, press ▲ or ▼ repeatedly to view alternative words. To accept a word and add a space, press #␣.
- To enter full stops and commas, press 1 and then ▲ or ▼ repeatedly.

This is an Internet version of this publication. © Print only for private use.

To enter text using multitap

- Press 2 - 9 until the character you want appears.
- Press #⌴♫ to add a space.
- Press 1 to enter punctuation marks.

To use the keys when entering text

- To change text input method, press and hold down *a/A.
- To change writing language, press and hold down #⌴♫.
- To shift between upper-case letters, lower-case letters and numbers, press *a/A.
- To delete characters, press C.
- To delete a whole word, press and hold down C.
- To enter numbers, press and hold down 0 + - 9.

To add a word to the dictionary

1 When you enter text using Zi text input, select Options > Spell word.
2 Enter the word using multitap and select Save.

Chinese input

This mobile phone has different input methods for entering Chinese characters:

- Stroke input
- Pinyin input

You can use these methods, for example, to enter Chinese names and Chinese short messages.

Switching between Chinese input methods

In the Chinese editing mode, you can select and switch quickly to another input method by pressing and holding down *a/A.

General instructions

Regardless of which input method you choose, your phone has a function to speed up the entry of Chinese

This is an Internet version of this publication. © Print only for private use.

characters. Whenever you enter a stroke or a Pinyin letter, a candidate row of the most frequently used characters containing that stroke or relating to that letter appears at the bottom of the screen.

If the character you want is not displayed in the candidate row, press ◎ to present another candidate row. Continue pressing ◎ until the character you want is displayed. Alternatively, you can enter the next stroke or Pinyin letter, and a new set of characters will immediately be displayed in the candidate row. To go back to the previous row, press ◎. To select a character in the candidate row, press the navigation key or press and hold the key corresponding to the number above the character you want to enter.

Stroke input

A Chinese character is built up of strokes. There are more than 30 basic strokes, which are grouped into five stroke categories. Each category is represented on the keypad by one of the keys 1 - 5. The Wild Card key 6, is used when you are not sure of which stroke to use.

Stroke categories

The five stroke categories are defined in the table below:

Number key	Stroke category	Basic stroke	Stroke name	Character
1	一	一	Over	王 十 在 七 天
		丿	Lift	海 红 牡 状 习
2	丨	丨	Down	中 业 上 门 丑
		亅	Down-Hook	小 水 打 子 承
		丶	Short Slope Down	直 真 质 草
3	丿	丿	Long Left Slope	八 九 丹 风 片

This is an Internet version of this publication. © Print only for private use.

Number key	Stroke category	Basic stroke	Stroke name	Character
		丿	Over Slope	香 千 匕 后 丢
		㇒	Short left Slope	而 页 面 学 殷
4	丶	丶	Dot	六 学 雷 心 性
		乀	Right Slope	人 火 又 送 林
		乚	Down-Curved-Over	四 西 酉 酸
5	𠂇	𠂉	Down-Over	山 巨 屯 母 凶
		𠂊	Left Slope-Over	么 去 公 约 能
		𠂆	Left Slope-Dot	女 要 好 巡 巢
		𠂈	Down-Lift	衣 以 饭 收 长
		𠃌	Right Slope-Hook	我 或 民 成 伐
		𠃍	Down-Over-Hook	心 必 思 忘
		𠃎	Down-Over-Curved-Hook	电 也 毛 兄 孔
		𠃋	Down-Over-Left-Slope	专 传 转
		𠃏	Down-Over-Down-Hook	马 与 张 号 费
		𠂇	Down-Over-Down	鼎 鼐
		𠂉	Over-Hook	写 字 皮 通 免
		𠂇	Over-Down	口 已 户 书 骨

This is an Internet version of this publication. © Print only for private use.

Number key	Stroke category	Basic stroke	Stroke name	Character
		丁	Over-Down-Hook	力 习 也 同 永
		𠂇	Over-Left Slope	又 之 登 多 社
		𠃌	Over-Down-Over- Left Slope	及 极 廷 建
		𠃍	Over-Left Slope- Curved-Hook	阿 队 陈 那 部
		𠃎	Over-Down-Over-Hook	乃 透 鼎 隽 杨
		𠃏	Over-Down-Over-Down	凸
		亅	Curved-Hook	狗 豹 家 逐 狂
		乙	Over-Down-Curved-Hook	乙 九 瓦 飞 风
		𠄌	Over-Down-Over	投 沿 船 凹
		𠄎	Over-Down-Lift	话 计 认 讯
6	? (Wild card key)			

Components

The basic building units of Chinese characters are components that are made up of strokes. After entering the first two strokes of the desired character, the component and character candidates that started with that stroke are displayed in the candidate row.

Using components is a fast method for entering complex characters.

! *The smaller candidates surrounded by dotted frames are components, and the*

This is an Internet version of this publication. © Print only for private use.

bigger candidates without dotted frames are characters.

For example, to enter “ 信息”

1 Enter “丿”, “丨” and “ 丶”.
2 Move the cursor to “信”, press the centre selection key.
3 Move the cursor to “息”, press the centre selection key again to select “ 息”.

Example of using the wild card key

The wild card key 6, is used to supplement unclear strokes in entering characters. If you want to enter “互”, but you only know that “ 一” is the first and the last stroke of the character and that the total number of strokes is four, enter 1, 6, 6, 1. The character is displayed in the candidate row.

Pinyin input

Press the keys containing the required Pinyin letters, and the phone will make various proposals on the screen, according to the pronunciation rules of Mandarin.

Below is the key mapping of Pinyin letters on the keypad.

Number Key	Pinyin Letter
2	a b c
3	d e f
4	g h i
5	j k l
6	m n o
7	p q r s
8	t u ü
9	w x y z

! *On the keypad, the letter ü is replaced by v.*

For example, to enter “ 信息”

1 Press 9, 4, 6.
2 When “xin” is highlighted, press ◀ or ▶ and select “ 信”, then press the centre selection key. (If you want to enter any of the other suggested Pinyin combinations, scroll up or down to the desired combination, then press the centre selection key.)
3 Press the centre selection key again to select “ 息”, when “ 息” is highlighted.

This is an Internet version of this publication. © Print only for private use.

Input punctuation, symbols and smilies

Under any Chinese input mode, press *a/A, to see the table of punctuation marks, symbols and smilies. Use the navigation key to make a selection. Press #⌴ to enter a space into the text.

Fuzzy Pinyin

Fuzzy Pinyin is an option for the Pinyin input method, which contains additional spelling alternatives.

To turn Fuzzy Pinyin on

- When you write using Pinyin input, select Options > Writing options > Fuzzy Pinyin.

Walkman™

You can listen to music, audio books and podcasts. Use *Sony Ericsson Media Manager* to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 32.

Stereo portable handsfree

To use the handsfree

- Connect the portable handsfree. Music stops when you receive a call and resumes when the call has ended.

This is an Internet version of this publication. © Print only for private use.

Walkman™ player

To play music

1 From standby select Menu > Media > Music.
2 Browse by category using the navigation key.
3 Scroll to a title and select Play.

To stop playing music

- Press the centre selection key.

To fast forward and rewind

- Press and hold down ◉ or ◉.

To move between tracks

- Press ◉ or ◉.

To minimise the player

- Press Ⓦ.

To return to the player

- Press Ⓦ.

Shake control

To switch track

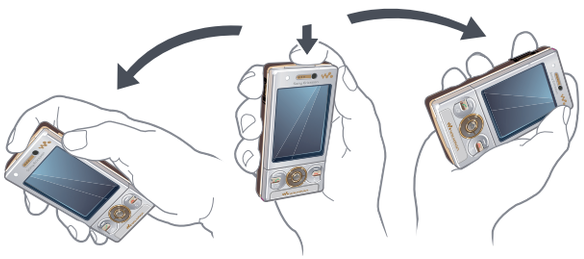

- When music is playing, press and hold down Ⓦ and move the phone to the right with a flick of your wrist to go to the next track. To go to the previous track, use the same action to the left.

To shuffle tracks

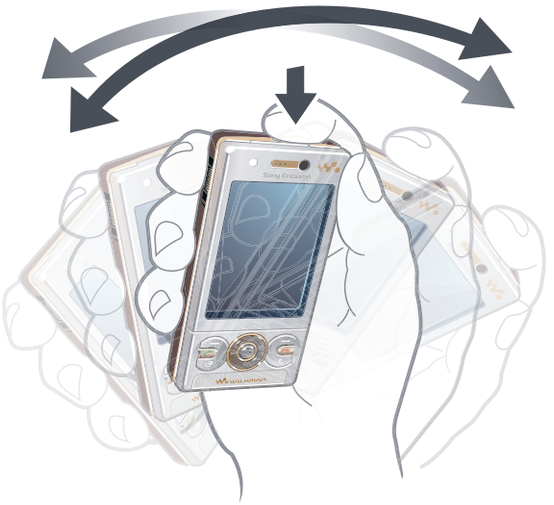

- When music is playing, press and hold down Ⓦ and shake your phone.

To change the volume

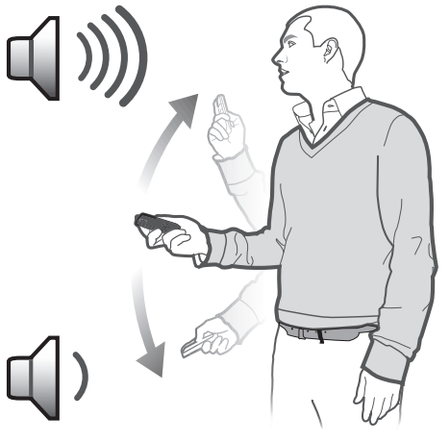

This is an Internet version of this publication. © Print only for private use.

1 When music is playing, hold the phone out in front of you facing upwards.
2 Press and hold down and bend your arm upwards towards you to increase the volume. To decrease the volume, repeat the action in the opposite direction.

Clear stereo and clear bass

Clear stereo and clear bass are turned on when you set the equaliser manually.

To turn on clear stereo and clear bass using equaliser presets

1 When the phone is open, from standby press .
2 Select Options > Settings > Equaliser.
3 Select any of the presets, except Normal.

Playlists

You can create playlists to organise your music. You can add tracks to more than one playlist.

Deleting a playlist, or a track from a playlist, does not delete the track from the memory, just the reference to the track in that list.

! *It may take a few minutes for the phone to create a playlist.*

To create a playlist

1 From standby select Menu > Media > Music > Playlists.
2 Scroll to New playlist and select Add.
3 Enter a name and select OK.
4 For each track you want to add, scroll to the track and select Mark.
5 Select Add to add the marked tracks to the playlist.

To add tracks to a playlist

1 From standby select Menu > Media > Music > Playlists.
2 Select a playlist.
3 Scroll to Add music and select Add.
4 For each track you want to add, scroll to the track and select Mark.
5 Select Add to add the marked tracks to the playlist.

SensMe™

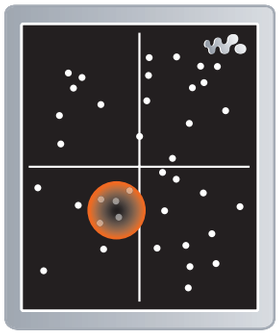

With SensMe™ you can create playlists in two ways, by mood or from all the tracks in your phone. By mood,

This is an Internet version of this publication. © Print only for private use.

you first use *Sony Ericsson Media Manager* to analyse and transfer tracks to your phone. Information such as mood, tempo and chords is then added. The tracks are displayed as dots on a map with two axes. In the All view, all the tracks in your phone are placed randomly on the map. You can create a playlist by selecting an area of tracks.

! *For information on how to analyse your music, click ? in the top right corner of the Sony Ericsson Media Manager window.*

To create a playlist by mood

1 From standby select Menu > Media > Music > SensMe™ > Open.
2 Press ▲, ▼, ▶ or ◀ to preview different tracks.
3 Select Add and press ▲ or ▼ to choose an area of tracks.
4 Select Create to create the playlist and play it in the Walkman™ player.
5 Select Options > Save playlist.
6 Enter a name and select OK.

To create a playlist from All view

1 Select Menu > Media > Music.
2 Scroll to SensMe™ and select Open.
3 Press ▲, ▼, ▶ or ◀.
4 Make sure you are in All view. If you are not, select All.
5 To preview different tracks, press ▲, ▼, ▶ or ◀.
6 To choose an area of tracks, select Add and press ▲ or ▼.
7 To create the playlist and play it in the Walkman™ player, select Create.
8 Select Options > Save playlist.
9 Enter a name and select OK.

Audio books

You can listen to audio books you have transferred to your phone from a computer using *Sony Ericsson Media Manager*.

! *It may take a few minutes before a transferred audio book appears in the list of available audio books.*

To access audio books

- From standby select Menu > Media > Music > Audio books.

You can find audio books in formats other than M4B and those that do not have ID3v2 chapter tags in the Tracks folder.

Buy Now

If you subscribe to a music service allowing limited, non-permanent use with your phone, you can mark a track you are interested in buying later. The next time you synchronise your music

This is an Internet version of this publication. © Print only for private use.

with Windows Media® Player on a computer with enabled Internet access, you should be asked if you want to buy the track you marked earlier. If you accept, the track is downloaded to your computer and your selected music service account is charged. This service requires a subscription and account with a downloadable music service, a computer with Microsoft® Windows Media® Player 11 or subsequent compatible version of Windows Media® Player, and a USB computer connection.

! *You cannot see that a track is marked. You cannot unmark tracks you have already marked.*

To mark a track

- When the track you want to mark is playing, press and hold down ⊡+.

PlayNow™

You can connect to PlayNow™ to download ringtones, games, music, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone. If you cannot use PlayNow™, see *I cannot use Internet-based services* on page 70.

! *This service is not available in all countries/regions.*

To use PlayNow™

1. From standby select Menu > PlayNow™.
2. Scroll the PlayNow™ Web site and follow the instructions to preview and purchase content.

TrackID™

TrackID™ is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio. If you cannot use TrackID™, see *I cannot use Internet-based services* on page 70.

To search for track information

- When you hear a track through a loudspeaker, from standby select Menu > Entertainment > TrackID™ > Start.
- When the radio is playing select Options > TrackID™.

For best results, use TrackID™ in a quiet area.

Online music and video clips

You can view video clips and listen to music by streaming them to your phone

This is an Internet version of this publication. © Print only for private use.

from the Internet. If you cannot use the Internet, see *I cannot use Internet-based services* on page 70.

To select a data account for streaming

1 From standby select Menu > Settings > the Connectivity tab > Streaming settings > Connect using:.
2 Select the data account to use.
3 Select Save.

To stream music and video clips

1 From standby select Menu > Internet Service.
2 Select Options > Go to > Bookmarks.
3 Select a link to stream from.

Video player

To play videos

1 From standby select Menu > Media > Video > Videos.
2 Scroll to a title and select Play.

To stop playing videos

- Press the centre selection key.

Radio

! *Do not use your phone as a radio in places where this is prohibited.*

To turn on the radio

1 Connect a handsfree to the phone.
2 Select Menu > Entertainment > Radio.

To search for channels automatically

- Select Search.

To search for channels manually

- Press ◀ or ▶.

To change the volume

- Press the volume key up or down.

To minimise the radio

- Select Options > Minimise.

To return to the radio

- From standby select Menu > Entertainment > Radio.

Saving channels

You can save up to 20 preset channels.

To save channels

1 When you have found a radio channel, select Options > Save.
2 Scroll to a position and select Insert.

To select saved channels

1 Select Options > Channels.
2 Select a radio channel.

This is an Internet version of this publication. © Print only for private use.

To switch between saved channels

- Press ◉ or ◉.

MusicDJ™

You can compose and edit your own melodies to use as ringtones. Pre-arranged sounds with different characteristics are available.

To compose a melody

1. From standby select Menu > Entertainment > MusicDJ™.
2. Select to Insert, Copy or Paste sounds.
3. Use ◉, ◉, ◉ or ◉ to scroll between the sounds.
4. Select Options > Save melody.

Record sound

You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

! *In some countries/regions or states it is required by law that you inform the other person before recording the call.*

To record a sound

- From standby select Menu > Entertainment > Record sound > Record.

To record a call

1. During an ongoing call, select Options > Record.
2. Select Save to save the recording.

To listen to a recording

1. From standby select Menu > Organiser > File manager.
2. Scroll to Music and select Open.
3. Scroll to a recording and select Play.

This is an Internet version of this publication. © Print only for private use.

Transferring and handling content

You can transfer and handle content such as pictures and music.

! *You are not allowed to exchange some copyright-protected material. identifies a protected item.*

Handling content in the phone

You can use File manager to handle content saved in the phone memory or on a memory card. Tabs and icons in File manager show where the content is saved. If the memory is full, delete some content to create space.

To view memory status

1 From standby select Menu > Organiser > File manager.
2 Select Options > Memory status.
3 Select Memory card or Phone.

To select more than one item in a folder

1 From standby select Menu > Organiser > File manager.
2 Scroll to a folder and select Open.
3 Select Options > Mark > Mark several.
4 For each item you want to mark, scroll to the item and select Mark.

To move items between the phone memory and the memory card

1 From standby select Menu > Organiser > File manager.
2 Find an item and select Options > Manage file > Move.
3 Select Memory card or Phone.
4 Scroll to a folder and select Open.
5 Select Paste.

To view information about content

1 From standby select Menu > Organiser > File manager.
2 Find an item and select Options > Information.

Sending content to another phone

You can send content, for example, in messages or using Bluetooth™ wireless technology.

To send content

1 Scroll to an item and select Options > Send.
2 Select a transfer method.

! *Make sure the receiving device supports the transfer method you select.*

This is an Internet version of this publication. © Print only for private use.

Transferring content to and from a computer

You can use *Sony Ericsson Media Manager* to transfer content between your phone and a computer.

Sony Ericsson Media Manager software is included on the CD that comes with your phone and available for download at www.sonyericsson.com/support.

When you move or copy content from a computer to your phone unrecognised content is saved in the Other folder in File manager.

Required operating systems

You need one of these operating systems to use the software included on the CD:

- Microsoft® Windows Vista™ (32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)
- Microsoft® Windows XP (Pro or Home), Service Pack 2 or higher

To install Sony Ericsson Media Manager

1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens.
2 Select a language and click *OK*.
3 Click *Install Sony Ericsson Media Manager* and follow the instructions.

To transfer content using Sony Ericsson Media Manager

1 Connect the phone to a computer with a USB cable supported by your phone.
2 **Computer:** *Start/Programs/Sony Ericsson/Sony Ericsson Media Manager*.
3 **Phone:** Select Media transfer.
4 **Computer:** Select *Portable device* and click *OK*.
5 Wait until the phone appears in *Sony Ericsson Media Manager*.
6 Move files between your phone and the computer in *Sony Ericsson Media Manager*.

Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.

For details on transferring music, click ? in the top right corner of the Sony Ericsson Media Manager window.

Using the USB cable

You can connect your phone to a computer with the USB cable to synchronise, transfer and back up phone content and use your phone as a modem. For more information, go to

This is an Internet version of this publication. © Print only for private use.

www.sonyericsson.com/support to read Feature guides.

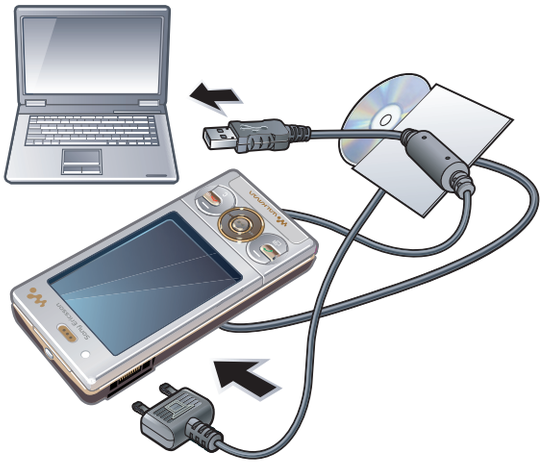

Before using the USB cable

See *Required operating systems* on page 32.

! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.*

To disconnect the USB cable safely

1 **Computer:** Close any software that you are using with your phone.
2 Disconnect the USB cable.

Drag and drop content

You can drag and drop content between your phone, a memory card and a computer in *Microsoft Windows Explorer*.

To drag and drop content

1 Connect your phone to a computer using a USB cable.
2 **Phone:** Select Media transfer. The phone will remain activated during file transfer.
3 **Computer:** Wait until the phone memory and memory card appear as external disks in *Windows Explorer*.
4 Drag and drop selected files between the phone and the computer.

Phone name

You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.

To enter a phone name

1 From standby select Menu > Settings > the Connectivity tab > Phone name.
2 Enter the phone name and select OK.

Using Bluetooth™ wireless technology

The Bluetooth function makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.

This is an Internet version of this publication. © Print only for private use.

- Connect to computers and access the Internet.
- Exchange items.
- Play multiplayer games.

! *A range within 10 metres (33 feet), with no solid objects in between, is recommended for Bluetooth communication.*

Before using Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

To turn on the Bluetooth function

- From standby select Menu > Settings > the Connectivity tab > Bluetooth > Turn on.

! *Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility turned on.*

To pair the phone with a device

1. From standby select Menu > Settings > the Connectivity tab > Bluetooth > My devices.
2. Scroll to New device and select Add to search for available devices.
3. Select a device.
4. Enter a passcode, if required.

To allow connection to the phone

1. From standby select Menu > Settings > the Connectivity tab > Bluetooth > My devices.
2. Select a device from the list.
3. Select Options > Allow connection.
4. Select Always ask or Always allow.

! *This is only possible with devices that require access to a secure service.*

To pair the phone with a Bluetooth handsfree for the first time

1. From standby select Menu > Settings > the Connectivity tab > Bluetooth > Handsfree.
2. Scroll to a device and select Yes.
3. Enter a passcode, if required.

Power saving

You can save battery power with the Power save function. In Power save mode you can only connect with a single Bluetooth device. If you want to connect with more than one Bluetooth device at the same time you must turn this function off.

This is an Internet version of this publication. © Print only for private use.

To turn on powersave

- From standby select Menu > Settings > the Connectivity tab > Bluetooth > Power save > On.

Transferring sound to and from a Bluetooth handsfree

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

To transfer sound

1. From standby select Menu > Settings > the Connectivity tab > Bluetooth > Handsfree > Incoming call.
2. Select an option. In phone transfers sound to the phone. In handsfree transfers sound to the handsfree.

To transfer sound during a call

1. During a call, select Sound.
2. Select from the list.

Backing up and restoring

You can backup and restore contacts, the calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*. You can backup and restore content such as music, pictures and video clips using the *Sony Ericsson Media Manager*

Before backing up and restoring, you need to install the *Sony Ericsson PC Suite* and the *Sony Ericsson Media Manager*.

You can backup and restore contacts within your phone using a Memory Stick Micro™ (M2™) memory card. You can move content between the memory card and the phone memory. See *Handling content in the phone* on page 31.

Back up your phone content regularly to make sure you do not lose it.

To make a backup using the Sony Ericsson PC Suite

1. **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/ Sony Ericsson/Sony Ericsson PC Suite*.
2. Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
3. **Phone:** Select Phone mode.
4. **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and make a backup.

To restore phone content using the Sony Ericsson PC Suite

The Sony Ericsson PC Suite will overwrite all the phone content during the restore

This is an Internet version of this publication. © Print only for private use.

process. You may damage your phone if you interrupt the process.

1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/ Sony Ericsson/Sony Ericsson PC Suite*.
2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
3 **Phone:** Select Phone mode.
4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and restore your phone.

To make a backup using the Sony Ericsson Media Manager

1 Connect your phone to the computer using a USB cable.
2 **Phone:** Select Media transfer mode.
3 **Computer:** Start *Sony Ericsson Media Manager* from *Start/Programs/ Sony Ericsson/Sony Ericsson Media Manager*.
4 Go to the backup section in the *Sony Ericsson Media Manager*.
5 Select the files you want to back up and make a backup.

! *You can also connect your phone to a computer using Bluetooth.*

To restore phone content using the Sony Ericsson Media Manager

! *The Sony Ericsson Media Manager will compare your phone content with your computer backup and then restore files missing in your phone. You may damage your phone if you interrupt the process.*

1 Connect your phone to the computer.
2 **Phone:** Select Media transfer mode.
3 **Computer:** Start *Sony Ericsson Media Manager* from *Start/Programs/ Sony Ericsson/Sony Ericsson Media Manager*.
4 Go to the backup section in the *Sony Ericsson Media Manager*.
5 Select the files you want to restore and restore them.

! *For more information on backing up and restoring in Sony Ericsson Media Manager see the Sony Ericsson Media Manager Feature guide at www.sonyericsson.com/support.*

This is an Internet version of this publication. © Print only for private use.

Calling

Making and receiving calls

You need to turn on your phone and be within range of a network.

To make a call

1 From standby enter a phone number (with international country/region code and area code, if applicable).
2 Press .

You can call numbers from your contacts and call list. See Contacts on page 39, and Call list on page 38. You can also use your voice to make calls. See Voice control on page 43.

To end a call

- Press .

To make international calls

1 From standby press and hold down 0+ until a “+” sign appears.
2 Enter the country/region code, area code (without the first zero) and phone number.
3 Press .

To re-dial a number

- When Retry? appears select Yes.

Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

To answer a call

- Press .

To reject a call

- Press .

To change the ear speaker volume during a call

- Press the volume key up or down.

To mute the microphone during a call

1 Press and hold down C.
2 Press and hold down C again to resume.

To turn on the loudspeaker during a call

- Press SpkrOn.

Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

To view missed calls from standby

- Press to open the call list.

Networks

Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability.

This is an Internet version of this publication. © Print only for private use.

Some network operators allow you to switch networks manually.

To switch networks manually

1 From standby select Menu > Settings > the Connectivity tab > Mobile networks > GSM/3G networks.
2 Select an option.

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. You can normally use these numbers to make emergency calls in any country/region, with or without the SIM card inserted, if you are within range of a network.

! *In some countries/regions, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

To make an emergency call

- From standby enter 112 (the international emergency number) and press .

To view your local emergency numbers

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Special numbers > Emergency nos..

Video call

You can share experiences with friends and family as they happen or save them to share later. You see the person you are talking to on your screen. The other person sees you or what is on your camera.

Before making video calls

3G (UMTS) service is available when 3G appears. To make a video call, both parties on the call must have a 3G (UMTS) phone subscription that supports 3G (UMTS) service and 3G (UMTS) coverage.

To use the zoom with an outgoing video call

- Press or .

To view video call options

- During the call, select Options.

Call list

You can view information about recent calls.

This is an Internet version of this publication. © Print only for private use.

To call a number from the call list

1 From standby press and scroll to a tab.
2 Scroll to a name or a number and press .

Contacts

You can save names, phone numbers and personal information in Contacts. Information can be saved in the phone memory or on the SIM card.

You can synchronise your contacts using the Sony Ericsson PC Suite.

Please add the area code when you save fixed line numbers in your phone.

Default contacts

You can choose which contact information is shown as default. If Phone contacts is selected as default, your contacts show all the information saved in Contacts. If you select SIM contacts as default, your contacts show names and numbers saved on the SIM card.

To select default contacts

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Advanced > Default contacts.
3 Select an option.

Phone contacts

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

To add a phone contact

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Add.
3 Enter the name and select OK.
4 Scroll to New number: and select Add.
5 Enter the number and select OK.
6 Select a number option.
7 Scroll between the tabs and add information to the fields.
8 Select Save.

Calling contacts

To call a contact written in Chinese characters

1 From standby select Menu > Contacts. Enter the entire multi-letter name, pure initial or mixed initial Pinyin of Chinese contacts you want to call.
2 When the contact is highlighted, press or to select a number. Press .

To call a contact written in Latin characters

1 From standby select Menu > Contacts. Scroll to, or enter, the first letters or all

This is an Internet version of this publication. © Print only for private use.

letters of the contact you want to call (a maximum of 10 letters).

2 When the contact is highlighted, press ◀ or ▶ to select a number. Press ☎.

! *Your phone supports Chinese and English contacts mixed search. When a contact is written in Latin characters, the entered letter can reach the Latin contact you want to call; when a contact is written in Chinese characters, the entered letter can reach the Pinyin of the Chinese contact you want to call.*

To go directly to the contacts list

- From standby press and hold down 2 – 9.

To call with Smart search

1 From standby press 0+ – 9 to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list.

2 Scroll to a contact or a phone number and press ☎.

To turn on or off Smart search

1 From standby select Menu > Settings > the Calls tab > Smart search.

2 Select an option.

Editing contacts

To add information to a phone contact

1 From standby select Menu > Contacts.

2 Scroll to a contact and select Options > Edit contact.

3 Scroll between the tabs and select Add or Edit.

4 Select an option and an item to add or edit.

5 Select Save.

If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.

To copy names and numbers to phone contacts

1 From standby select Menu > Contacts.

2 Scroll to New contact and select Options > Advanced > Copy from SIM.

3 Select an option.

To copy names and numbers to the SIM card

1 From standby select Menu > Contacts.

2 Scroll to New contact and select Options > Advanced > Copy to SIM.

This is an Internet version of this publication. © Print only for private use.

3 Select an option.

! *When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.*

To automatically save names and phone numbers on the SIM card

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Advanced > Auto save on SIM.
3 Select an option.

To save contacts on a memory card

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Advanced > Back up to m. card.

SIM contacts

SIM contacts can contain names and numbers only. They are saved on the SIM card.

To add a SIM contact

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Add.
3 Enter the name and select OK.
4 Enter the number and select OK.
5 Select a number option and add more information, if available.
6 Select Save.

Deleting contacts

To delete all contacts

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Advanced > Delete all contacts.
3 Select an option.

Contact memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

To view contact memory status

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Advanced > Memory status.

Myself

You can enter information about yourself and, for example, send your business card.

To enter Myself information

1 From standby select Menu > Contacts.
2 Scroll to Myself and select Open.
3 Scroll to an option and edit the information.
4 Select Save.

To add your own business card

1 From standby select Menu > Contacts.

This is an Internet version of this publication. © Print only for private use.

2 Scroll to Myself and select Open.
3 Scroll to My contact info and select Add > Create new.
4 Scroll between the tabs and add information to the fields.
5 Enter the information and select Save.

Groups

You can create a group of phone numbers and email addresses from Phone contacts to send messages to. See *Messaging* on page 46. You can also use groups (with phone numbers) when you create accepted callers lists. See *Accept calls* on page 45.

To create a group of numbers and email addresses

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Groups.
3 Scroll to New group and select Add.
4 Enter a name for the group and select Continue.
5 Scroll to New and select Add.
6 For each contact phone number or email address you want to mark, scroll to it and select Mark.
7 Select Continue > Done.

Speed dial

Speed dialling lets you select nine contacts that you can dial quickly from standby. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Speed dial.
3 Scroll to a position number and select Add.
4 Select a contact.

To speed dial

- From standby enter the position number and press .

More calling features

Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

To enter your voicemail number

1 From standby select Menu > Messaging > Messages > Settings > the Message settings tab > Voicemail number.

This is an Internet version of this publication. © Print only for private use.

2 Enter the number and select OK.

To call your voicemail service

- From standby press and hold down 1.

Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

To record a voice command using voice dialling

1 From standby select Menu > Settings > the General tab > Voice control > Voice dialling > Activate.
2 Select Yes > New voice command and select a contact. If the contact has more than one number, select the number to add the voice command to.
3 Record a voice command such as “John mobile.”
4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
5 If the recording sounds OK, select Yes. If not, select No and repeat steps 3 and 4.

! *Voice commands are saved in the phone memory only. They cannot be used in another phone.*

To voice dial

1 From standby press and hold down a volume key.
2 Wait for the tone and say a recorded name, for example “John mobile.” The phone plays the name back to you and connects the call.

Diverting calls

You can divert calls, for example, to an answering service.

! *When Restrict calls is used, some divert call options are not available. See Restricted dialling on page 45.*

To divert calls

1 From standby select Menu > Settings > the Calls tab > Divert calls.
2 Select a call type and a divert option.
3 Select Activate.
4 Enter the number to divert calls to and select OK.

More than one call

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You

This is an Internet version of this publication. © Print only for private use.

cannot answer a third call without ending one of the first two calls.

Call waiting

You will hear a beep if you receive a second call while call waiting is active.

To activate call waiting

- From standby select Menu > Settings > the Calls tab > Manage calls > Call waiting > Activate.

To make a second call

1. During the call, press . This puts the ongoing call on hold.
2. Select Options > Add call.
3. Enter the number to call and press .

To answer a second call

- During the call, press . This puts the ongoing call on hold.

To reject a second call

- During the call, press and continue with the ongoing call.

To end an ongoing call and answer a second call

- During the call, select Replace active call.

Handling two voice calls

You can have calls ongoing and on hold at the same time.

To switch between two calls

- During the call, press .

To join two calls

- During the call, select Options > Join calls.

To end an ongoing call and return to the call on hold

- First press and then .

Conference calls

With a conference call, you can have a joint conversation with up to five people.

To add a new participant

1. During the call, press . This puts the joined calls on hold.
2. Select Options > Add call.
3. Enter the number to call and press .
4. Select Options > Join calls to add the new participant.
5. Repeat this task to add more participants.

To release a participant

1. Select Options > Release party.

This is an Internet version of this publication. © Print only for private use.

2 Select the participant to release.

To have a private conversation

1 During the call, select Options > Talk to and select the participant to talk to.
2 To resume the conference call, select Options > Join calls.

My numbers

You can view, add and edit your own phone numbers.

To check your phone numbers

1 From standby select Menu > Contacts.
2 Scroll to New contact and select Options > Special numbers > My numbers.
3 Select an option.

Accept calls

You can choose to receive calls from certain phone numbers only.

To add numbers to the accepted callers list

1 From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > Only from list.
2 Scroll to New and select Add.
3 Select a contact or Groups.

See Groups on page 42.

To accept all calls

- From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > All callers.

Restricted dialling

You can restrict outgoing and incoming calls. A password from your service provider is required.

! *If you divert incoming calls, you cannot use some restrict calls options.*

Restrict calls options

Standard options are:

- All outgoing – all outgoing calls
- Outgoing intl – all outgoing international calls
- Outgoing intl roam. – all outgoing international calls except to your home country/region
- All incoming – all incoming calls
- Inc. when roaming – all incoming calls when you are abroad

To restrict calls

1 From standby select Menu > Settings > the Calls tab > Manage calls > Restrict calls.
2 Select an option.
3 Select Activate.
4 Enter your password and select OK.

This is an Internet version of this publication. © Print only for private use.

Call time and cost

During a call, the phone shows how long you have been talking. You can also check on the duration of your last call, your outgoing calls and the total time of all your calls.

To check the call time

- From standby select Menu > Settings > the Calls tab > Time & cost > Call timers.

Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

To hide your phone number

1. From standby select Menu > Settings > the Calls tab > Show/hide my no..
2. Select Hide number.

Messaging

Text and picture messages

Messages can contain text, pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.

When sending messages, the phone automatically selects the most suitable method (as a text or picture message) for sending the message.

If you cannot use picture messages, see *I cannot use Internet-based services* on page 70.

Sending messages

You can send messages from your phone.

To create and send a message

1. From standby select Menu > Messaging > Write new > Message.
2. Enter text. To add items to the message, press , scroll and select an item.
3. Select Continue > Contacts look-up.
4. Select a recipient and select Send.

If you send a message to a group, you will be charged for each member. See Groups on page 42.

This is an Internet version of this publication. © Print only for private use.

To copy and paste text in a message

1. When you write the message, select Options > Copy & paste.
2. Select Copy all or Mark & copy. Scroll to and mark text in the message.
3. Select Options > Copy & paste > Paste.

Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

To save an incoming message on a memory card

- Select Menu > Messaging > Messages > Settings > Save to > Memory card.

To save a message on the SIM card

1. Select Menu > Messaging > Messages and select a folder.
2. Scroll to a message and select Options > Save message.

To view a message from the inbox

1. Select Menu > Messaging > Inbox.
2. Scroll to the message and select View.

To call a number in a message

- When you view the message, scroll to the phone number and press .

Templates

If you often use the same phrases and pictures in a message, you can save the message as a template.

To add a message template

1. Select Menu > Messaging > Messages > Templates > New template > Add.
2. Enter text. To add items to the message, press , scroll and select an item.
3. Select Save.
4. Enter a title and select OK.

To save a message as a template

1. From standby select Menu > Messaging > Inbox.
2. Scroll to the message and select View > Options > Save as template.

Message options

You can set some options, such as the Message alert and default storage location, to apply to all messages. You can set other options, such as the Delivery priority and Delivery time, for each message you send.

To set options for all messages

1. From standby select Menu > Messaging > Messages > Settings.
2. Scroll to an option and choose Select.

This is an Internet version of this publication. © Print only for private use.

To set options for a specific message

1 When the message is ready and a recipient is selected, select Options > Advanced.
2 Scroll to an option and select Edit.

Voice messages

You can send and receive a sound recording as a voice message.

! *The sender and recipient must have a subscription supporting picture messaging.*

To record and send a voice message

1 From standby select Menu > Messaging > Write new > Voice message.
2 Record the message and select Stop > Send > Contacts look-up.
3 Select a recipient and select Send.

Email

You can use standard email functions and your computer email address in your phone.

You can synchronise your email using Microsoft® Exchange ActiveSync®.

Before using email

You can use the setup wizard to check if settings are available for your email account or you can enter them manually. You can also receive settings at *www.sonyericsson.com/support*.

To create an email account

1 To start the setup wizard, select Menu > Messaging > Email.
2 Follow the instructions to create the account.

If you enter settings manually, you can contact your email provider for more information. An email provider could be the company that supplied your email address.

To write and send an email message

1 From standby select Menu > Messaging > Email > Write new.
2 Select Add > Enter email address. Enter the email address and select OK.
3 To add more recipients, scroll to To: and select Edit.
4 Scroll to an option and select Add > Enter email address. Enter the email address and select OK. When you are ready, select Done.
5 Select Edit and enter a subject. Select OK.
6 Select Edit and enter the text. Select OK.
7 Select Add and choose a file to attach.
8 Select Continue > Send.

This is an Internet version of this publication. © Print only for private use.

To receive and read an email message

1. From standby select Menu > Messaging > Email > Inbox > Options > Check new email.
2. Scroll to the message and select View.

To save an email message

1. From standby select Menu > Messaging > Email > Inbox.
2. Scroll to the message and select View > Options > Save message.

To reply to an email message

1. From standby select Menu > Messaging > Email > Inbox.
2. Scroll to the message and select Options > Reply.
3. Write the reply and select OK.
4. Select Continue > Send.

To view an attachment in an email message

- When you view the message, select Options > Attachments > Use > View.

Active email account

If you have several email accounts, you can change which one is active.

To change the active email account

1. From standby select Menu > Messaging > Email > Accounts.
2. Select an account.

Push email

You can receive notification in your phone from your email server that you have new email messages.

To turn on push email notification

- From standby select Menu > Messaging > Email > Settings > Push email.

This is an Internet version of this publication. © Print only for private use.

Imaging

You can take photos and record video clips to view, save or send. You find saved photos and video clips in Media and in File manager.

Using the camera

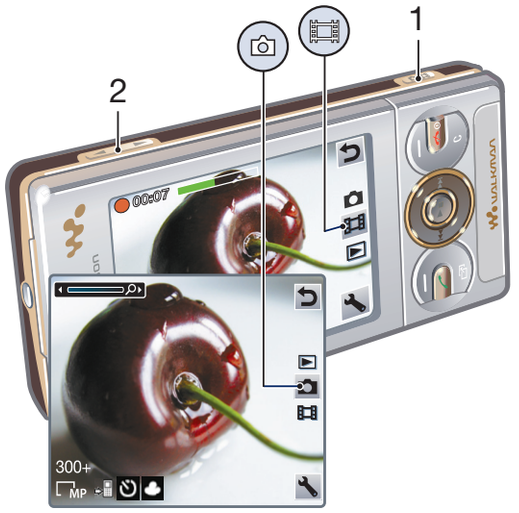

1	Take photos/Record video
2	Zoom in or out

To activate the camera

- From standby press .

To take a photo

1 Activate the camera and press the navigation key to scroll to .

This is an Internet version of this publication. © Print only for private use.

2 Press to take a photo. The photo is automatically saved.

To record a video clip

1 Activate the camera and press the navigation key to scroll to .
2 Press fully down to start recording.
3 To stop recording, press fully down. The video clip is automatically saved.

To use zoom

- Press the volume key.

! *When taking a photo, zoom is available only in VGA mode.*

To adjust brightness

- Press the navigation key. The amount of brightness is shown beside the .

To view photos

1 Activate the camera and press the navigation key to scroll to .
2 Scroll through the photos.

To view video clips

1 Activate the camera and press the navigation key to scroll to .
2 Scroll to a video clip and press the centre selection key.

More camera features

To change settings

- Activate the camera and select .

To view information about settings

- Scroll to a setting and select .

To improve a photo with Photo fix

1 Activate the camera and press the navigation key to scroll to .
2 Make sure Review is set to On. Select > Settings and scroll to Review > On.
3 Take a photo.
4 During review, select Options > Photo fix.

Viewing and tagging photos

To view photos in a slide show

1 From standby select Menu > Media > Photo > Camera album.
2 Select a month.
3 Scroll to a photo and select View.
4 Select Options > Slide show.
5 Select a mood.

Viewing photos on a map

When appears on the screen, your geographical position is saved with the photos you take. This is called geo

This is an Internet version of this publication. © Print only for private use.

tagging, and it shows the approximate location of where a photo was taken.

To view photos on a map

1 From standby select Menu > Media > Photo > Camera album.
2 Select a month.
3 Scroll to a photo and select View.
4 Select Options > View on map.

To change the geo tagging setting

1 Activate the camera and press the navigation key to scroll to .
2 Select > Settings > Add position.
3 Select an option.

Photo tags

You can tag photos to categorise them in Photo tags. For example, you can create a tag called vacation and add it to all your vacation photos.

To create a new photo tag

1 From standby select Menu > Media > Photo > Camera album.
2 Select a month.
3 Scroll to a photo and select View.
4 Press and select Options > New tag.
5 Enter a name and select OK.
6 Select an icon.
7 To tag the photo, select Options > Tag this photo.

To tag photos

1 From standby select Menu > Media > Photo > Camera album.
2 Select a month.
3 Scroll to a photo and select View.
4 Press and scroll to a tag.
5 Select Options > Tag this photo.
6 For each photo you want to tag, scroll to the photo and select Options > Tag this photo.

Using photos

You can add a photo to a contact, use it during phone startup, as a wallpaper in standby or as a screen saver.

To use photos

1 From standby select Menu > Media > Photo > Camera album.
2 Select a month.
3 Scroll to a photo and select View.
4 Select Options > Use as.
5 Select an option.

To set a Java™ application as a wallpaper

1 From standby select Menu > Settings > the Display tab.
2 Select Wallpaper > Application.
3 Select a Java application.

! *You can only see the Java applications that have support for wallpaper.*

This is an Internet version of this publication. © Print only for private use.

Working with photos

You can view, enhance and organise your photos and video clips on your computer by installing the *Adobe™ Photoshop™ Album Starter Edition*. It is included on the CD that comes with your phone and available for download at *www.sonyericsson.com/support*.

Use *Sony Ericsson Media Manager* to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 32.

PhotoDJ™ and VideoDJ™

You can edit photos and video clips.

To edit and save a photo

1 From standby select Menu > Media > Photo > Camera album.
2 Select a month.
3 Scroll to a photo and select View.
4 Select Options > Edit in PhotoDJ™.
5 Edit the photo.

To edit and save a video clip

1 From standby select Menu > Organiser > File manager > Videos.
2 Scroll to a video clip and select Options > Edit in VideoDJ™.
3 Edit the video clip.
4 Select Options > Save.

To trim a video clip

1 From standby select Menu > Organiser > File manager > Videos.
2 Scroll to a video clip and select Options > Edit in VideoDJ™ > Edit > Trim.
3 Select OK > Set > Start to set the starting point.
4 Select Set > End to set the ending point.
5 Select Trim > Options > Save.

Printing photos

You can print photos using the USB cable connected to a compatible printer.

You can also print using a Bluetooth compatible printer that supports the Object Push Profile.

To print photos using a USB cable

1 Connect a USB cable to the phone.
2 Connect the USB cable to the printer.
3 Wait for feedback in the phone and select OK.
4 Enter printer settings (if required) and select Print.
5 Select Menu > Media > Photo > Camera album.
6 Select a month.

This is an Internet version of this publication. © Print only for private use.

7 Scroll to a photo and select Options > Print.

You should disconnect and re-connect the USB cable if there is a printer error.

Internet

If you cannot use the Internet, see *I cannot use Internet-based services* on page 70.

To start browsing

1 Select Search.
2 Enter a Web address, a search phrase or the name of a bookmark.
3 Scroll to an item in the list and select Go to or Search.

To exit the browser

- When you browse the Internet, select Options > Exit browser.

Bookmarks

You can create and edit bookmarks as quick links to your favourite Web pages.

To create a bookmark

1 When you browse the Internet, select Options > Tools > Add bookmark.
2 Enter a title and an address. Select Save.

To select a bookmark

1 From standby select Menu > Internet Service.
2 Select Options > Go to > Bookmarks.
3 Scroll to a bookmark and select Go to.

This is an Internet version of this publication. © Print only for private use.

History pages

You can view Web pages you have browsed.

To view history pages

- From standby select Menu > Internet Service > Options > Go to > History.

More browser features

To use pan and zoom on a Web page

1. When you browse the Internet, press #⌴.
2. Use the navigation key to move the frame.
3. Press Zoom.
4. To switch back to pan, press #⌴.

! *To use pan and zoom, Smart-Fit must be turned off.*

To turn on or off Smart-Fit Rendering™

1. From standby select Menu > Internet Service > Options > Advanced > Smart-Fit.
2. Select an option.

To make a call when you browse

- Press .

To save a picture from a Web page

1. When you browse the Internet, select Options > Tools > Save picture.
2. Select a picture.

To find text on a Web page

1. When you browse the Internet, select Options > Tools > Find on page.
2. Enter text and press Find.

To send a link

1. When you browse the Internet, select Options > Tools > Send link.
2. Select a transfer method.

! *Make sure the receiving device supports the transfer method you select.*

Internet keypad shortcuts

You can use the keypad to go directly to an Internet browser function.

Key	Shortcut
1	Bookmarks
2 - 9	Enter text to Enter address, Search Internet or search in Bookmarks
0 +	Zoom
#⌴	Pan & zoom (when Smart-Fit is off)

This is an Internet version of this publication. © Print only for private use.

To select Internet keypad shortcuts

1 From standby select Menu > Internet Service.
2 Select Options > Advanced > Keypad mode > Shortcuts.

Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.

To view certificates in the phone

- From standby select Menu > Settings > the General tab > Security > Certificates.

Web feeds

You can subscribe to and download frequently updated content, such as news, podcasts or photos, using Web feeds.

To add new feeds for a Web page

1 When you browse a page on the Internet that has Web feeds, indicated by , select Options > Web feeds.
2 For each feed you want to add, scroll to the feed and select Mark.
3 Select Continue.

To search for Web feeds

1 Select Menu > Media > Web feeds.
2 Select New feed and enter a Web address.

To download content via Web feeds

1 Select Menu > Media > Web feeds.
2 Scroll to an updated feed and select View or ►.
3 Select a heading to expand.
4 Select an icon depending on content, to open a Web page, to download an audio podcast, to download a video podcast or to download a photo.

You can also subscribe to and download content to a computer via feeds using Media Go™. You can then transfer the content to your phone.

Updating Web feeds

You can manually update your feeds, or schedule updates. When there are updates, appears on the screen.

To schedule Web feed updates

1 From standby select Menu > Media > Web feeds.
2 Scroll to a feed and select Options > Schedule update.

This is an Internet version of this publication. © Print only for private use.

3 Select an option.

! *Frequent updates may be costly.*

Web feeds in standby

You can show news updates on the standby screen.

To show Web feeds in standby

1 From standby select Menu > Media > Web feeds.
2 Scroll to a feed and select Options > Settings > Standby ticker > Show in standby.

To access Web feeds from standby

1 From standby select Ticker.
2 To read more about a feed, press ◉ or ◉ to scroll to a headline and select Go to.

Podcasts

Podcasts are files, for example, radio programmes or video content, that you can download and play. You subscribe to and download podcasts using Web feeds.

To access audio podcasts

- From standby select Menu > Media > Music > Podcasts.

To access video podcasts

- From standby select Menu > Media > Video > Podcasts.

This is an Internet version of this publication. © Print only for private use.

GPS

Your phone has a GPS receiver that uses satellite signals to calculate your location.

! *If you cannot use some GPS features, see I cannot use Internet-based services on page 70.*

Using GPS

Your location can be found when you have a clear view of the sky. If your location is not found after a few minutes, move to another location. To help the search, stand still and do not cover the GPS antenna.

! *The first time you use the GPS it may take up to 10 minutes before your location is found.*

More GPS features

Save locations

You can find all saved locations in My favourites.

To save your current location

1. From standby select Menu > Location services > My favourites > Add new place.
2. Select Edit and enter the title. Select OK.
3. Scroll to Description: and select Add. Enter the description and select OK.
4. Scroll to Position: and select Add > Current position.
5. Select Save.

To view a saved location on a map

1. From standby select Menu > Location services > My favourites.
2. Scroll to a location and select Go to.

Location requests

External services may ask for your location.

To change access for external services

1. Select Menu > Location services > Settings > Privacy.
2. Select an option.

This is an Internet version of this publication. © Print only for private use.

Turn off GPS

The GPS receiver turns off automatically when it is not in use. You can also turn the GPS receiver off manually. This saves battery power when you use features that do not require the GPS receiver to find your location.

To turn on or off GPS manually

1 Select Menu > Location services > Settings.
2 Select Enable GPS or Disable GPS.

Tracker

Tracker is a GPS-based sports application which allows you to keep track of your speed, distance, route and energy consumption during training. You can base the training on how long time you want to train or on what distance you want to cover. You can also base it on a previous training route which has GPS data.

! *Information provided by use of the Tracker application is approximate. Sony Ericsson makes no warranty of any kind with respect to the accuracy of the Tracker application. Any serious health and fitness concerns should be referred to a health care professional.*

To start a training session

1 Select Menu > Location services > Tracker > Start training.
2 Select a training type.
3 Scroll to an item, select Edit and enter the data.
4 To save, select Done.
5 To start training, select Start.

To compare results during training

1 Select Menu > Location services > Tracker > Start training.
2 Select Route based.
3 Scroll to Route:, select Edit and select a route.
4 Scroll to Live compare and select Edit.
5 Scroll to the result you want to compare with and select Compare.
6 Select Done and then Start.

! *A GPS location is required before results can be compared. For more information, see Using GPS on page 58.*

To end a training session manually

• During a training session, select Pause > End.

Results

The training result is shown after a session is ended. You can view past results anytime, and compare them if they have GPS data.

This is an Internet version of this publication. © Print only for private use.

To compare results

1 Select Menu> Location services > Tracker > Results.
2 Scroll to a result and select Options > Compare.
3 Select a result to compare with.

! *A GPS location is required before results can be compared. For more information, see Using GPS on page 58.*

Energy consumption

To calculate and view the energy consumption for a session you must first set your personal profile in Settings in Tracker. You view the energy consumption in the result view.

To turn on energy consumption

- Select Menu > Location services > Tracker > Settings > Energy consumption > On.

Synchronising

You can synchronise in two different ways. You can synchronise your phone using a computer program or you can synchronise using an Internet service.

Use only one of the synchronisation methods at a time with your phone.

For more information, go to *www.sonyericsson.com/support* to read the *Synchronisation* Feature guide.

Synchronising using a computer

You can use the USB cable or Bluetooth wireless technology to synchronise phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook®.

Before synchronising, you need to install the *Sony Ericsson PC Suite*.

Sony Ericsson PC Suite software is included on the CD with your phone and available for download at www.sonyericsson.com/support.

See *Required operating systems* on page 32.

This is an Internet version of this publication. © Print only for private use.

To install the Sony Ericsson PC Suite

1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens.
2 Select a language and click *OK*.
3 Click *Install Sony Ericsson PC suite* and follow the instructions on the screen.

To synchronise using the Sony Ericsson PC Suite

1 **Computer:** Start *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
3 **Phone:** Select Phone mode.
4 **Computer:** When you are notified that the *Sony Ericsson PC Suite* has found your phone, you can start synchronising.

For usage details, see the Sony Ericsson PC Suite Help section once the software has been installed on your computer.

Synchronising using an Internet service

You can synchronise with an Internet service using SyncML™ or a Microsoft® Exchange Server using Microsoft Exchange ActiveSync. For more information, go to *www.sonyericsson.com/support* to read the *Synchronisation* Feature guide.

This is an Internet version of this publication. © Print only for private use.

More features

Flight mode

In Flight mode the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- Normal mode – full functionality
- Flight mode – limited functionality

To activate the flight mode menu

- From standby select Menu > Settings > the General tab > Flight mode > Continue > Show at startup.

To select flight mode

1. When the flight mode menu is activated, turn off your phone.
2. Turn on your phone and select Flight mode.

Update Service

You can update your phone with the latest software using your phone or a PC.

This service is not available in all countries/regions.

To view the current software in the phone

1. From standby select Menu > Settings > the General tab > Update service.
2. Select Software version.

Update Service using the phone

You can update your phone over the air using your phone. You do not lose personal or phone information.

Update Service using your phone requires data access such as GPRS.

To select update settings

- From standby select Menu > Settings > the General tab > Update service > Settings > Internet settings.

To use Update Service using the phone

1. Select Menu > Settings > General > Update service.
2. Select Search for update and follow the instructions that appear.

Update Service using a PC

You can update your phone using the provided USB cable and an Internet connected PC.

Make sure all personal data on your phone's memory is backed up before you perform an update using a PC.

This is an Internet version of this publication. © Print only for private use.

To use Update Service using a PC

- Go to *www.sonyericsson.com/updateservice*.

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.

To set the alarm

1. From standby select Menu > Organiser > Alarms.
2. Scroll to an alarm and select Edit.
3. Scroll to Time: and select Edit.
4. Enter a time and select OK > Save.

To set the recurrent alarm

1. From standby select Menu > Organiser > Alarms.
2. Scroll to an alarm and select Edit.
3. Scroll to Recurrent: and select Edit.
4. Scroll to a day and select Mark.
5. To select another day, scroll to the day and select Mark.
6. Select Done > Save.

To set the alarm signal

1. From standby select Menu > Organiser > Alarms.
2. Scroll to an alarm and select Edit.
3. Scroll to the ♫ tab.
4. Scroll to Alarm signal: and select Edit.
5. Find and select an alarm signal. Select Save.

To silence the alarm

- When the alarm sounds, press any key.
- To repeat the alarm, select Snooze.

To turn off the alarm

- When the alarm sounds, press any key, then select Turn off.

To cancel the alarm

1. From standby select Menu > Organiser > Alarms.
2. Scroll to an alarm and select Turn off.

The alarm in silent mode

You can set the alarm not to sound when the phone is in silent mode.

To set an alarm to sound or not in silent mode

1. From standby select Menu > Organiser > Alarms.
2. Scroll to an alarm and select Edit.
3. Scroll to the ♫ tab.
4. Scroll to Silent mode: and select Edit.
5. Select an option.

To set the snooze duration

1. From standby select Menu > Organiser > Alarms.

This is an Internet version of this publication. © Print only for private use.

2 Scroll to an alarm and select Edit.
3 Scroll to Snooze duration: and select Edit.
4 Select an option.

Calendar

You can synchronise your calendar with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).

Appointments

You can add new appointments or reuse existing appointments.

To add an appointment

1 From standby select Menu > Organiser > Calendar.
2 Select a date.
3 Scroll to New appointment and select Add.
4 Enter the information and confirm each entry.
5 Select Save.

To view an appointment

1 From standby select Menu > Organiser > Calendar.
2 Select a date.
3 Scroll to an appointment and select View.

To edit an appointment

1 From standby select Menu > Organiser > Calendar.
2 Select a date.
3 Scroll to an appointment and select View.
4 Select Options > Edit.
5 Edit the appointment and confirm each entry.
6 Select Save.

To set when reminders should sound

1 From standby select Menu > Organiser > Calendar.
2 Select a date.
3 Select Options > Advanced > Reminders.
4 Select an option.

A reminders option set in calendar affects a reminders option set in tasks.

Notes

You can make notes and save them. You can also show a note in standby.

To add a note

1 From standby select Menu > Organiser > Notes.
2 Scroll to New note and select Add.
3 Write a note and select Save.

This is an Internet version of this publication. © Print only for private use.

To show a note in standby

1 Select Menu >Organiser > Notes.
2 Scroll to a note and select Options > Show in standby.

To hide a note from standby

1 Select Menu > Organiser > Notes.
2 Scroll to the note shown in standby. This is marked with an icon. Select Options > Hide in standby.

Tasks

You can add new tasks or reuse existing tasks.

To add a task

1 From standby select Menu > Organiser > Tasks.
2 Select New task and select Add.
3 Select an option.
4 Enter details and confirm each entry.

To set when reminders should sound

1 From standby select Menu > Organiser > Tasks.
2 Scroll to a task and select Options > Reminders.
3 Select an option.

! *A reminders option set in tasks affects a reminders option set in calendar.*

Profiles

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

To select a profile

1 From standby select Menu > Settings > the General tab > Profiles.
2 Select a profile.

To view and edit a profile

1 From standby select Menu > Settings > the General tab > Profiles.
2 Scroll to a profile and select Options > View and edit.

! *You cannot rename the Normal profile.*

Time and date

To set the time

1 From standby select Menu > Settings > the General tab > Time & date > Time.
2 Enter the time and select Save.

To set the date

1 From standby select Menu > Settings > the General tab > Time & date > Date.
2 Enter the date and select Save.

This is an Internet version of this publication. © Print only for private use.

To set the time zone

1 From standby select Menu > Settings > the General tab > Time & date > My time zone.
2 Select the time zone you are in.

! *If you select a city, My time zone also updates the time when daylight saving time changes.*

Theme

You can change the appearance of the screen through items such as colours and wallpaper. You can also create new themes and download them. For more information, go to *www.sonyericsson.com/fun*.

To set a theme

1 From standby select Menu > Settings > the Display tab > Theme.
2 Scroll to a theme and select Set.

Main menu layout

You can change the layout of the icons in the main menu.

To change the main menu layout

1 From standby select Menu > Options > Main menu layout.
2 Select an option.

Ringtones

To set a ringtone

1 From standby select Menu > Settings > the Sounds & alerts tab > Ringtone.
2 Find and select a ringtone.

To set the ringtone volume

1 From standby select Menu > Settings > the Sounds & alerts tab > Ring volume.
2 Press ◐ or ◑ to change the volume.
3 Select Save.

To turn off the ringtone

- From standby press and hold down #⌴♫.

! *The alarm signal is not affected.*

To set the vibrating alert

1 From standby select Menu > Settings > the Sounds & alerts tab > Vibrating alert.
2 Select an option.

Screen orientation

You can change between landscape and portrait orientation, or select Auto rotate to have the orientation change when you rotate the phone.

This is an Internet version of this publication. © Print only for private use.

To change screen orientation in the browser

1 From standby select Menu > .
2 Select Options > Advanced > Orientation.
3 Select an option.

To change screen orientation in Media

1 From standby select Menu > Media > Settings > Orientation.
2 Select an option.

Games

Your phone contains preloaded games. You can also download games. Help texts are available for most games.

To start a game

1 From standby select Menu > Media > Games.
2 Select a game.

To end a game

- Press .

Applications

You can download and run Java applications. You can also view information or set different permissions. If you cannot use Java applications, see *I cannot use Internet-based services* on page 70.

To select a Java application

1 Select Menu > Organiser > Applications.
2 Select an application.

To set permissions for a Java application

1 Select Menu > Organiser > Applications.
2 Scroll to an application and select Options > Permissions.
3 Set permissions.

Java application screen size

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

To set the screen size for a Java application

1 Select Menu > Organiser > Applications.
2 Scroll to an application and select Options > Screen size.
3 Select an option.

Walk mate

Walk mate is a step counter application. It keeps track of how many

This is an Internet version of this publication. © Print only for private use.

steps you have walked and how many steps you have left towards a daily goal. You can put your phone in a pocket when you use Walk mate. You can also set Walk mate as wallpaper to view in standby.

To set Walk mate as wallpaper

1 From standby select Menu > Settings > the Display tab.
2 Select Wallpaper > Application.
3 Select Walk mate.

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.

To unblock the SIM card

1 When PIN blocked appears, enter your PUK and select OK.
2 Enter a new four-to-eight-digit PIN and select OK.
3 Re-enter the new PIN and select OK.

To edit the PIN

1 From standby select Menu > Settings > the General tab > Security > Locks > SIM protection > Change PIN.
2 Enter your PIN and select OK.
3 Enter a new four-to-eight-digit PIN and select OK.
4 Re-enter the new PIN and select OK.

! *If Codes do not match appears, you entered the new PIN incorrectly. If Wrong PIN appears, followed by Old PIN:, you entered your old PIN incorrectly.*

To use the SIM card lock

1 From standby select Menu > Settings > the General tab > Security > Locks > SIM protection > Protection.
2 Select an option.
3 Enter your PIN and select OK.

Phone lock

You can stop unauthorised use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code.

! *It is important that you remember your new code. If you forget it, you have to take*

This is an Internet version of this publication. © Print only for private use.

your phone to your local Sony Ericsson retailer.

To use the phone lock

1 From standby select Menu > Settings > the General tab > Security > Locks > Phone protection > Protection.
2 Select an option.
3 Enter the phone lock code and select OK.

To unlock the phone

- Enter your code and select OK.

To change the phone lock code

1 From standby select Menu > Settings > the General tab > Security > Locks > Phone protection > Change code.
2 Enter the old code and select OK.
3 Enter the new code and select OK.
4 Repeat the code and select OK.

Keypad lock

You can set this lock to avoid accidental dialling. Incoming calls can be answered without unlocking the keypad.

! *Calls to the international emergency number 112 can still be made.*

To use the automatic keylock

1 From standby select Menu > Settings > the General tab > Security > Automatic keylock.
2 Select an option.

To unlock the keypad manually

- From standby press any key and select Unlock > OK.

IMEI number

To view your IMEI number

- From standby press *a/A, #, 0 +, 6, #.

This is an Internet version of this publication. © Print only for private use.

Troubleshooting

Some problems will require you to call your network operator.

For more support go to *www.sonyericsson.com/support*.

Common questions

I have problems with memory capacity or the phone is working slowly

Restart your phone every day to free memory or do a Master reset.

Master reset

If you select Reset settings, the changes that you have made to settings will be deleted.

If you select Reset all, your settings and content, such as contacts, messages, pictures, sounds and downloaded games, will be deleted. You may also lose content that was in the phone at purchase.

To reset the phone

1. From standby select Menu > Settings > the General tab > Master reset.
2. Select an option.
3. Follow the instructions that appear.

I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 8.

No battery icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

Some menu options appear in grey

A service is not activated. Contact your network operator.

I cannot use Internet-based services

Your subscription does not include data capability. Settings are missing or incorrect.

You can download settings by going to *www.sonyericsson.com/support*.

I cannot send messages from my phone

Most messages require a service centre number to send them. The number is supplied by your service

This is an Internet version of this publication. © Print only for private use.

provider and is usually saved on the SIM card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

To send most picture messages, you must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator or at *www.sonyericsson.com/support*.

To enter a service centre number

1 From standby select Menu > Settings > Connectivity tab > Message settings > Text message and scroll to Service centre. The number is shown if it is saved on the SIM card.
2 If there is no number shown, select Edit.
3 Scroll to New ServiceCentre and select Add.
4 Enter the number, including the international "+" sign and country/region code.
5 Select Save.

To select an MMS profile

1 From standby select Menu > Settings > the Connectivity tab > Message settings > Picture message.
2 Select an existing profile or create a new one.

To set the message server address

1 From standby select Menu > Settings > the Connectivity tab > Message settings > Picture message.
2 Scroll to a profile and select Options > Edit.
3 Scroll to Message server and select Edit.
4 Enter the address and select OK > Save.

The phone does not ring or rings too softly

Make sure that Silent mode has not been set to On. See *To turn off the ringtone* on page 66.

Check the ringtone volume. See *To set the ringtone volume* on page 66.

Check the profile. See *To select a profile* on page 65.

Check the divert call options. See *To divert calls* on page 43.

The phone cannot be detected by other devices using Bluetooth wireless technology

You have not turned the Bluetooth function on. Make sure that the visibility

This is an Internet version of this publication. © Print only for private use.

is set to show phone. See *To turn on the Bluetooth function* on page 34.

I cannot synchronise or transfer content between my phone and my computer, when using the USB cable.

The cable or software that came with your phone has not been properly installed. Go to *www.sonyericsson.com/support* to read Feature guides which contain detailed installation instructions and troubleshooting guides.

I have forgotten my code memo passcode

If you forget your passcode, you must reset the code memo. This means that all entries in the code memo are deleted. The next time you enter the code memo, you must proceed as if you are opening it for the first time.

To reset code memo

1 From standby select Menu > Organiser > Code memo.
2 Enter an incorrect passcode 3 times.
3 Reset Code memo and delete all items? appears.
4 Select Yes.

Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?

How do I use my new Sony Ericsson cell phone to upload photos to photo.blog.sina.com?

First, make sure that you have registered for an account on photo.blog.sina.com.

You have to link up your cell phone number with photo.blog.sina.com to be able to use this function.

Then follow these steps to link up:

1 On your computer, register and log in at photo.blog.sina.com, and then click on the Upload Photos button. Click on the Link up your cell phone for free link in the upload page.
2 Enter your cell phone number in the upload page, and then click the Save button. Now your cell phone number is linked up with photo.blog.sina.com!

This is an Internet version of this publication. © Print only for private use.

3 Use your cell phone to edit a multimedia message and send it to 1066888817102. This picture will appear in your default album on photo.blog.sina.com. The title and text of the multimedia message will become the title and description of the photo on photo.blog.sina.com. (Sina.com does not charge anything for you to send photos from your cell phone to photo.blog.sina.com, but local telecom operators will charge transmission fees according to their own policies.)

Follow these steps when you want to cancel the link or if you need to change the number of the linked up cell phone:

1 Log in to photo.blog.sina.com and click on the Upload Photos button. Click on the Cancel link to cell phone link in the upload page.
2 Click the OK button, and the link between your cell phone number and photo.blog.sina.com will be canceled.

SMS/MMS Blogging Services Activation Instructions for blog.163.com

Please first log in to the 163.com SMS/MMS blogging services page to start the activation process:

1 Register/log in at 163.com, then go to the SMS blogging services page (http://blog.163.com/services/emsblog.html?fromservices), and click **Free Activation of SMS Blogging**.
2 Enter your account number, password, and mobile phone number, and then click **Next**.
3 After clicking **Get Activation Code For Free**, you will receive a six-digit activation code via SMS; enter this code in the box provided and click **Next**.
4 When you see the **Phone Activation Complete** page, then your cell phone has been successfully activated for SMS/MMS blogging services, and you can start blogging right away.

About the fees:

1. There is no monthly service charge for SMS/MMS blogging; 163.com does not charge any fees.

2. Telecom charges are the same as those for SMS/MMS messages sent to other phones, and are determined by your telecom provider (China Mobile or China Unicom).

There is no charge for undelivered messages; incoming messages are free.

This is an Internet version of this publication. © Print only for private use.

Error messages

Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 6.

The SIM card connectors need cleaning. If the card is damaged, contact your network operator.

Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select Yes.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 68.

Codes do not match

Codes that you have entered do not match. When you want to change a security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 68.

No netw. coverage

Your phone is in flight mode. See *Flight mode* on page 62.

Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

Emerg. calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 38.

PUK blocked. Contact operator.

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

This is an Internet version of this publication. © Print only for private use.

Important information

Sony Ericsson Consumer Web site

At *www.sonyericsson.com/support* there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose to liquid or moisture or excess humidity.
- For optimum performance, the product should not be operated in temperatures below -10°C(+14°F) or above +45°C(+113°F). Do not expose the battery to temperatures above +60°C(+140°F).



- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend the product.

- Do not paint or attempt to disassemble or modify the product. Only Sony Ericsson authorised personnel should perform service.

- If you are in close proximity to a pacemaker or other medical devices, or you are in a hospital, or you have a pacemaker or cochlea implanted, or you are using a hearing aid, please consult authorised physicians and refer to instructions from the medical device manufacturer before you use the product.
- Discontinue use of electronic devices, or disable the radio transmitting functionality of the device, where required or requested to do so.
- Do not use the product in a potentially explosive environment, such as a gas station, oil depot, chemical factory or other flammable and explosive areas.
- Do not place the product, or install wireless equipment, in the area above an air bag in a car.
- **Caution:** Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use the Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper

This is an Internet version of this publication. © Print only for private use.

outlet installed by an electrician. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may pose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +5°C (+41°F) and +45°C (+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks. Replace the battery only with another Sony Ericsson battery that has been qualified with the product per the standard IEEE-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Note: The environmental protection period (EPUP) of a battery is 5 years.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm(6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's representative to be sure that the mobile phone or Bluetooth handsfree will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided “As is” and “With all faults”. Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage the phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with

This is an Internet version of this publication. © Print only for private use.

your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure, go to: *www.sonyericsson.com/cn*.

Flight mode

Bluetooth and WLAN functionality, if available in the device, can be enabled in Flight mode but may be prohibited onboard aircraft or in other areas where radio transmissions are prohibited. In such environments, please seek proper authorisation before enabling Bluetooth or WLAN functionality even in Flight mode.

Malware

Malware (short for malicious software) is software that can harm the mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that the device will be impervious to the introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to the mobile phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human

This is an Internet version of this publication. © Print only for private use.

health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson call centre. Do not attempt to remove internal batteries. Internal batteries shall be removed only by a waste treatment facility or trained service professional.

Disposing of the battery

Check local regulations or call a Sony Ericsson call centre for information. Never use municipal waste.

Declaration of substances

When the product is operated under the conditions in the product manual, the environmental protection period (EPUP) is 20 years.

Part Name	Toxic or hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr6+)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Phone	X	0	0	0	0	0
Battery	X	0	0	0	0	0
Accessories and chargers	X	0	0	0	0	0
0: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006. X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006. (Currently there are no alternative technologies available.)						

Memory card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

This is an Internet version of this publication. © Print only for private use.

Precautions on memory card use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End User Licence Agreement

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors.

Sony Ericsson grants you a non-exclusive limited licence to use the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the Software, reproduce and distribute the Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided the third party agrees in writing to be bound by the terms of this Licence.

This licence exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third party in writing.

Failure to comply with any of these terms and conditions will terminate the licence immediately.

Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. To the extent that the Software contains material or code of a third party, such third parties shall be beneficiaries of these terms.

This licence is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights.

In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions

This is an Internet version of this publication. © Print only for private use.

shall also govern your possession and usage of the Software.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as “Product”).

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit *www.sonyericsson.com/cn* to get further information.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present, Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

Conditions

1. The warranty is valid only if the original proof of purchase issued to the original purchaser by a Sony Ericsson authorised dealer specifying the date of purchase and serial number*, for this Product, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for thirty (30) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including, but not limited to, use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

   A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

This is an Internet version of this publication. © Print only for private use.

Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in the appearance of the camera image may occur between phones. This is not uncommon in digital cameras and does not mean that the camera is defective in any way.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.
7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/regions/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer’s rights against the dealer arising from their sales/purchase contract.

* In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

This is an Internet version of this publication. © Print only for private use.

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for W715

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentornet
SE-221 88 Lund, Sweden
declare under our sole responsibility that our product
Sony Ericsson type AAD-3880025-AV
and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V3.2.1, EN 301 908-2:V3.2.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V1.2.1, EN 301 489-24:V1.4.1, EN 300 440-1:V1.4.1, EN 300 440-2:V1.1.2, EN 301 489-3:V1.4.1, EN 60 950-1:2006 following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive **1999/5/EC**.

CE 0682

Lund, October 2008



Rikko Sakaguchi,
Head of Creation & Development
We fulfil the requirements of the R&TTE Directive **(1999/5/EC)**.

This is an Internet version of this publication. © Print only for private use.

Index

A

activity menu 16
alarms 63
answering service 42
applications 67
appointments 64
assembly 6
audio book 27
auto rotate 66

B

backing up and restoring 35
battery
    charging 8
    inserting 6
    use and care 76
Bluetooth™ wireless technology 33
bookmarks 54
business card 41

C

calendar 64
call divert 43
call list 38
call numbers in message 47
call time 46
caller-specific ringtones 40
calls
    accepting 45
    answering and rejecting 37
    emergency 38
    handling two calls 44
    international 37
    making and receiving 37
    putting on hold 43
    recording 30
    video 38
camera 50
    activating 50
    overview 50
    printing 53
clear bass 26
clear stereo 26
code memo 72
conference calls 44
contacts
    adding phone contacts 39
    default contacts 39
    groups of 42
costs 7

D

date 65
declaration of conformity 82
downloading music 28

E

email 48
emergency numbers 38
end user licence agreement 79

This is an Internet version of this publication. © Print only for private use.

entering text 17

F
file manager 31
flight mode 62

G
games 67
geo tagging 51
GPS 58
groups 42

H
handsfree 24, 43
    Bluetooth™ wireless technology . 34
help 8
hiding number 46

I
imaging 50
IMEI number 69
Internet
    bookmarks 54
    screen orientation 67
    security and certificates 56
    settings 70

K
keypad lock 69
keys 11

L
language 17
location services 58
lock
    keypad 69
    phone 68
    SIM card 68

M
master reset 70
Media Manager 32
media transfer 32
memory 16
memory card 16
memory status 41
menu overview 13
messages
    email 48
    text and picture 46
    voice 48
microphone 37
MMS See picture messages
MusicDJ™ 30
my numbers 45

N
navigating menus 15
notes 64

O
online music and video clips 28

This is an Internet version of this publication. © Print only for private use.

P

pan and zoom, Web pages 55
PC Suite 60
phone memory 16
phone mode 61
phone name 33
phone, turning on 7
photo fix 51
PhotoDJ™ 53
photos 51
    editing 53
    geo tagging 51
    improving 51
    tags 52
picture messages 46
pictures 51
PIN 7, 68
playlists 26
PlayNow™ 28
podcasts 57
power saving 34
profiles 65
PUK 68
push email 49

R

radio 29
recording, listen to 30
restricted dialling 45
ringtones 66
roaming 7
RSS feeds See Web feeds

S

safety guidelines 75
screen orientation 66, 67
search, on Web pages 55
selection keys 15
SensMe™ 26, 27
settings, Internet 70
shake control 25
shortcuts 15
SIM card
    copying to/from 40
    inserting 6
    lock and unblock 68
SMS See text messages
SOS See emergency numbers
sound recorder 30
Specific Absorption Rate 77
speed dialling 42
standby 7
    notes 65
step counter 67
synchronising 60

T

T9™ Text Input 18
tagging photos 51
tasks 65
templates 47
text messages 46
theme 66
time 65, 66
time zone 66

This is an Internet version of this publication. © Print only for private use.

Tracker 59
TrackID™ 28
training 59
transfer method
Bluetooth™ wireless technology . 33
USB cable 32
transferring
music 32
photos 32
sound 35
turning on/off
Bluetooth™ function 34
phone lock 69
SIM lock protection 68

U

Update Service 62
USB cable 32

V

video editing 53
video player 29
video recorder 50
VideoDJ™ 53
voice control 43
voice messages 48
voicemail 42
volume
ear speaker 37
ringtone 66

W

Walk mate 67
Walkman™ player 24, 25
warranty 80
Web feeds 56
Web pages, history 55

Z

zoom 51

This is an Internet version of this publication. © Print only for private use.